



TRICS sensor is unblocked at rest to half throttle.

TRICS sensor is blocked at half thru full throttle.

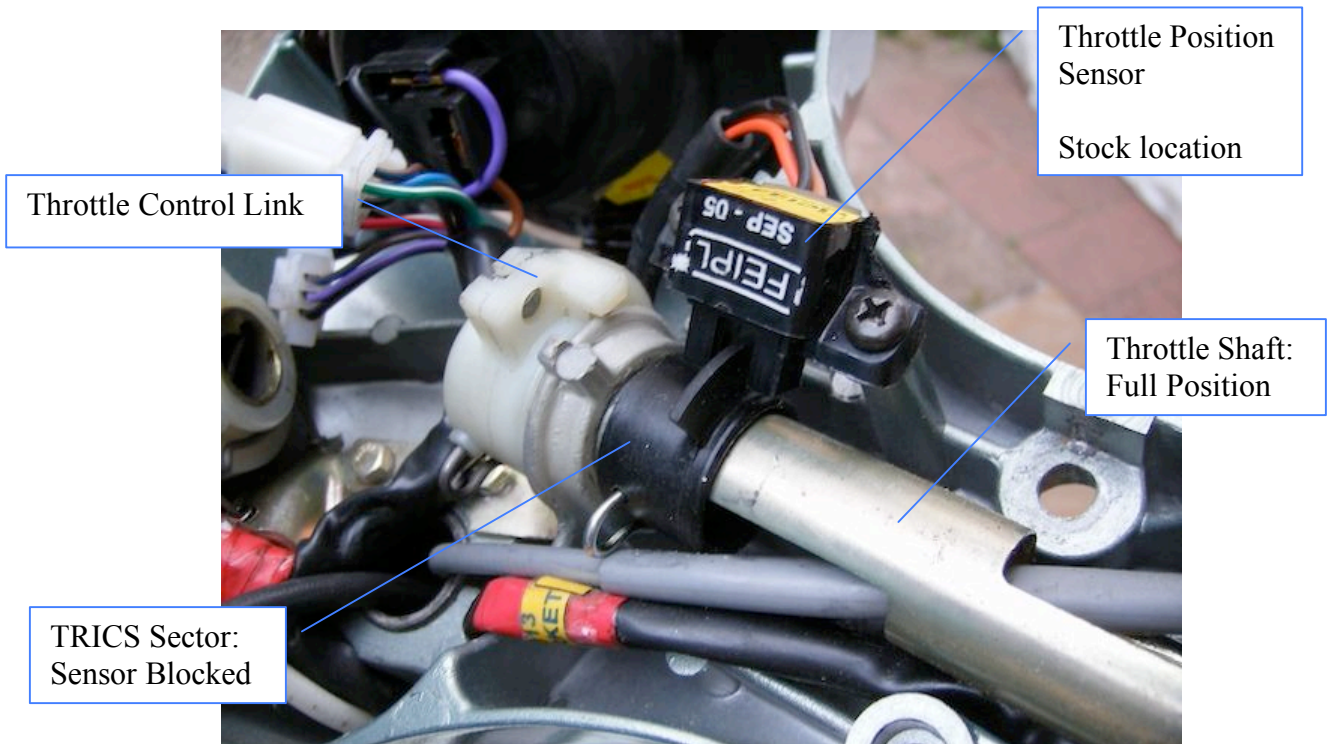

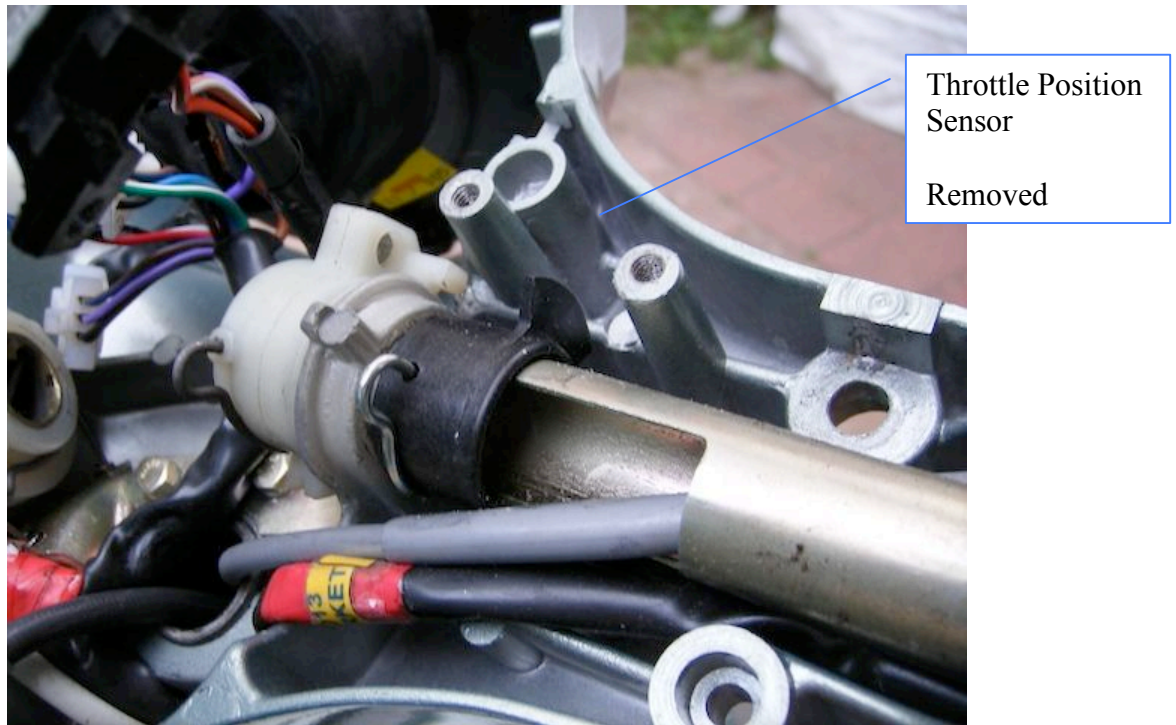

Unscrew two screws and rotate the sensor 180 degrees.

Re-secure the sensor with the two screws.

The sensor is now unblocked for the full throttle range.

